


© 1982, Coleco (Canada) Limitee
Imprimé au Canada

Importé par: Coleco (Canada) Limitee
4000 St-Ambroise, Montréal (Québec), Canada, H4C 2C8



Permet à 4 piles alcalines "C", ou l'éliminateur de piles Perma Power #2298 de Coleco (non inclus).

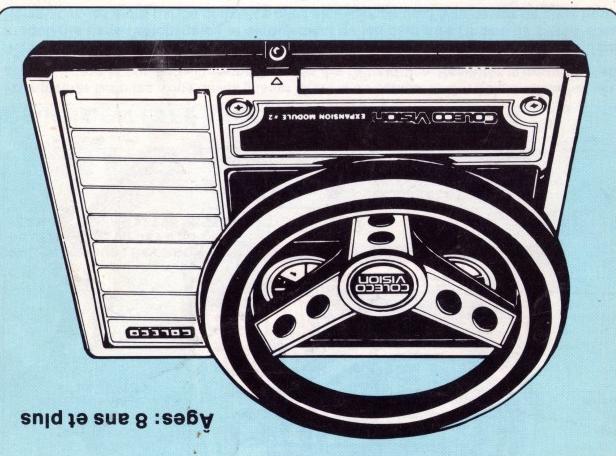

Âges: 8 ans et plus

Fonctionne sur votre console ColecoVision™.
Recree toute l'action des jeux de course automobile de type arcade.

MODULE D'EXPANSION # 2



Guide No. 56244 A

GUIDE DU JEUER

MODEL No 2413

OWNERS MANUAL


MODEL NO. 2413

Guide No. 56244 A



EXPANSION MODULE #2

Lets you play Arcade-Quality Driving & Racing Games on Your ColecoVision™ Game System!

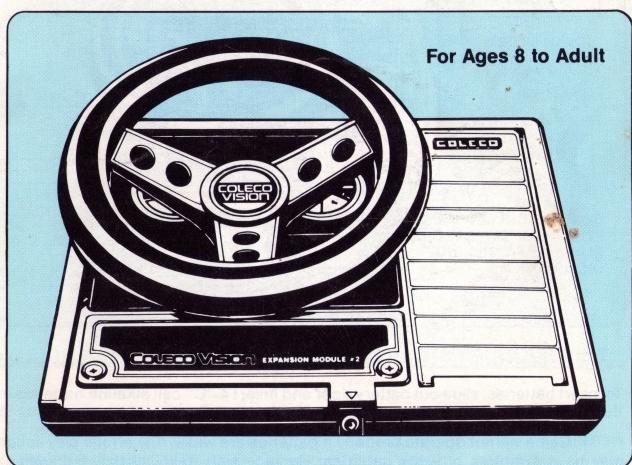

Requires 4 "C" Cell Alkaline Batteries or Coleco's # 2298 Perma Power™ Battery Eliminator (neither included).



Imported by: Coleco (Canada) Limitee
4000 St. Ambroise, Montreal (Quebec), Canada, H4C 2C8

© 1982, Coleco (Canada) Limitee


Printed in Canada

CONSUMERS PLEASE NOTE!

Please read the Owner's Manual carefully before using this product. If a malfunction occurs, please refer to the Troubleshooting Checklist. If you cannot correct the malfunction, please call Customer Service, Toll-Free nationwide:

INSERT GAME BATTERIES

Requires 4 "C" cell alkaline batteries or COLECO'S # 2298 PERMA POWER™ BATTERY ELIMINATOR (neither included).

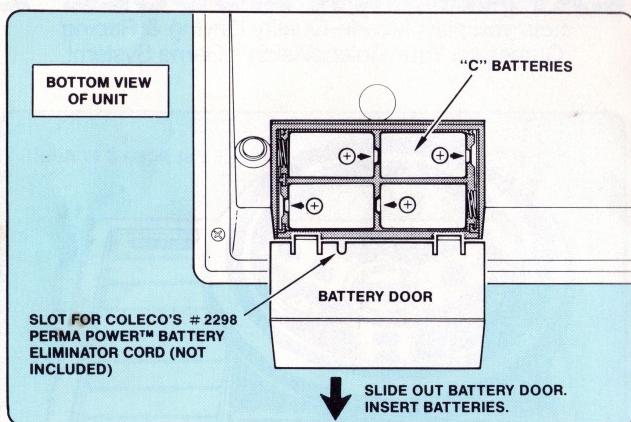

THIS PRODUCT SHOULD ONLY BE ASSEMBLED BY AN ADULT.


To insert batteries, slide out battery door and insert 4 "C" cell **alkaline** batteries in the order and direction shown. Replace battery door.

NOTE: Game will not operate properly if batteries are weak. Any erratic play action may be a symptom of weak batteries. Replace with fresh alkaline batteries or a Perma Power™ Battery Eliminator.

STOP BUYING BATTERIES

COLECO'S # 2298 PERMA POWER™ BATTERY ELIMINATOR will operate your COLECO games, plus many other manufacturers' products. See your local dealer for details.

HOOKING UP YOUR EXPANSION MODULE

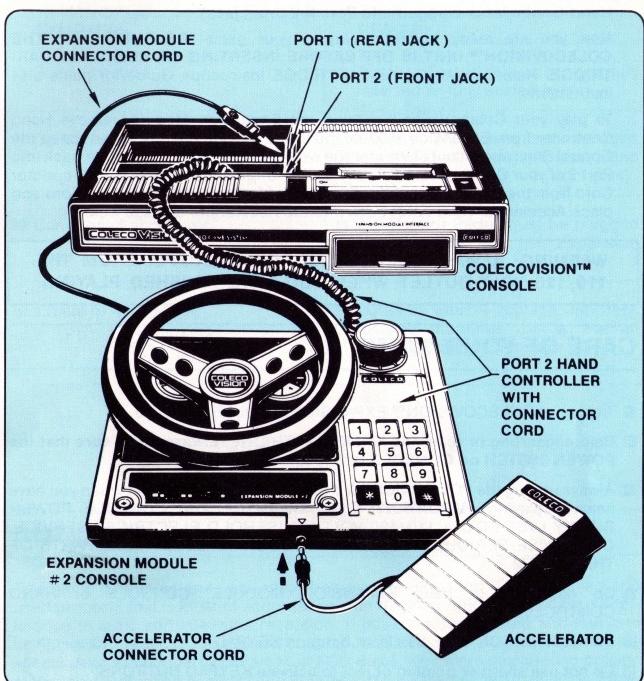

1. Unplug and remove the Port 1 Hand Controller from the COLECOVISION™ console, and set it aside.
2. Plug the Expansion Module Connector Cord into the Port 1 jack of the COLECOVISION™ console. See illustration above.
3. Remove Accelerator from the storage well in the Expansion Module. Push down on the bottom of the Accelerator. This will raise the top of the Pedal out far enough from the storage well to grasp and lift out. Now plug the Accelerator Connector Cord into the jack in front of the Expansion Module as shown. Place Accelerator on the floor.

(Continued on next page)

4. Lift out the Port 2 Hand Controller from the COLECOVISION™ console and slide the bottom of Hand Controller into the Accelerator Pedal Well. When Hand Controller is in place, align the Connector Cord with the slot provided and push the top of the Hand Controller down until it snaps into place. **BE SURE** Port 2 Hand Controller is plugged into Port #2 (front jack).

Now you are ready to begin playing your game! **BE SURE THAT THE COLECOVISION™ UNIT IS OFF BEFORE INSERTING OR REMOVING CARTRIDGE.** Refer to your GAME CARTRIDGE Instruction Guide for game play instructions.

To play your ColecoVision™ without the Expansion Module, remove Hand Controller from Expansion Module, push the locking clip back and grasp the Control Stick and lift out of the storage well. Place the Hand Controller back into Port 2 of your ColecoVision™ Console unit. Unplug the Accelerator Connector Cord from the jack in front of the Expansion Module. Neatly wind the cord and place Accelerator (and cord) back into the Accelerator storage well.

WARNING: ALWAYS UNPLUG THE POWER SUPPLY FROM THE 110/120 VOLT OUTLET WHEN YOU HAVE FINISHED PLAYING.

CARE OF YOUR GAME

- Treat your COLECOVISION™ EXPANSION MODULE with care.
 - Before inserting or removing GAME CARTRIDGE, **always make sure that the POWER SWITCH on CONSOLE unit is turned "OFF".**
 - Always unplug the POWER SUPPLY from the 110/120 volt outlet when you have finished playing. **IMPORTANT: ONLY CONNECT THE CONSOLE POWER SUPPLY UNIT INTO A 110/120 VOLT HOUSEHOLD ELECTRICAL SERVICE, OTHERWISE SERIOUS DAMAGE MAY OCCUR TO ELECTRICAL PARTS OF THE SYSTEM.**
 - Do not drop or bang EXPANSION MODULE, CONSOLE or HAND CONTROLLERS.
 - Do not force CONTROL STICK or bang on KEYPAD.
 - Do not use sharp or pointed object to activate KEYPAD BUTTONS.
 - Do not store or leave EXPANSION MODULE, CONSOLE and accessories where they may be subject to heat build-up.
 - Do not force GAME CARTRIDGE in EXPANSION MODULE.
 - Keep away from moisture. Do not immerse EXPANSION MODULE, CONSOLE or HAND CONTROLLERS in water. Use a soft, slightly damp cloth to wipe clean.
- WARNING:** Before cleaning EXPANSION MODULE, CONSOLE and accessories, turn POWER SWITCH to "OFF" and disconnect the AC POWER SUPPLY unit from the 110/120 volt wall outlet.
- Do not attempt to repair Expansion Module.** It does not contain any owner serviceable parts. Refer to your TROUBLESHOOTING section, if not successful refer to LIMITED WARRANTY.

TROUBLESHOOTING

SYMPTOM	REMEDY
■ Buzzing sound	■ Game Cartridge not properly inserted or fully seated in slot.
■ Game doesn't start	■ Expansion Module must be plugged into Port #1 (rear jack) and Hand Controller into Port #2 (front jack).
■ Car doesn't accelerate	■ Accelerator Pedal must be plugged into jack in front of Expansion Module.
■ Erratic or no steering	■ Batteries weak — replace with fresh alkaline batteries or a Perma-Power™ Battery Eliminator.

NOTICE

This game generates and uses radio frequency energy and if not installed and used properly, that is in strict accordance with the instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this game does cause interference to radio or television reception, which can be determined by turning the game off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient the TV antenna.

Relocate the game with respect to the TV.

Move the game away from the TV.

Plug the game into a different outlet so that game and TV are on different branch circuits.

If necessary, the user should consult the dealer or an experienced radio/television technician for additional suggestions.

90 DAY LIMITED WARRANTY

Coleco warrants to the original consumer purchaser of its ColecoVision™ Expansion Module # 2 in Canada that the product will be free of defects in material or workmanship to 90 days from the date of purchase under normal in-house use.

If your ColecoVision Expansion Module # 2 fails to operate properly DURING THE FIRST 90 DAYS AFTER PURCHASE, please call or write to the address mentioned below in order to obtain a Coleco return authorization number.

NOTE: NO RETURNS WILL BE ACCEPTED WITHOUT AN AUTHORIZATION NUMBER.

NUMBER: All returns must be sent insured prepaid and be accompanied with your name and address, proof of purchase and a brief description of the problem and be directed to:

COLECO (CANADA) LIMITÉE
(CUSTOMER SERVICE ELECTRONICS)
4000 ST-AMBROISE
MONTREAL, P.Q.
H4C 2C8
TEL: (514) 937-9191

If your unit is found to be factory defective during the first 90 days, it will be repaired or replaced at no cost to you. If the unit is found to have been consumer damaged or abused and therefore not covered by the warranty, then you will be advised, in advance, of repair costs.

of repair costs.

Coleco's sole and exclusive liability for defects in material and workmanship shall be limited to repair or replacement at its Service Station, and Coleco shall in no event be liable for incidental, consequential contingent or any other damages. This warranty does not obligate Coleco to bear the cost of transportation charges in connection with the repair or replacement of defective parts.

This warranty is invalid if the damage or defect is caused by accident, act of God, consumer abuse, unauthorized alteration or repair, vandalism or misuse.

This warranty is made in lieu of any other express warranty, and except for the foregoing warranty which is exclusive, there is no other express warranty being made.

Please read the Owner's Manual carefully before using the product, if a malfunction occurs, please refer to the troubleshooting checklist in the Owner's Manual. If you cannot correct the malfunction after consulting the troubleshooting checklist, return complete

SERVICE POLICY

SERVICE POLICY

Make your check payable to Coleco Canada Limitee in the amount of \$ 25.00
ColecoVision Expansion Module # 8

ColecoVision Expansion Module # 2 \$ 35.00
Coleco's service obligation does not apply to defects arising from abuse, misuse or alteration of the unit. If the unit is found to have been consumer damaged or abused and therefore not covered under warranty, Coleco will charge for repair.

Please call 1-800-338-6438 for more information.



EXPANSION MODULE #2

CONSUMERS PLEASE NOTE!

Please read the Owner's Manual carefully before using this product. If a malfunction occurs, please refer to the Troubleshooting Checklist.

PLEASE RETAIN THIS GUIDE
AND ALL LITERATURE FOR FUTURE REFERENCE



Imported by: Coleco (Canada) Limitée
4000 St. Ambroise, Montreal (Quebec), Canada, H4C 2C8

© 1982, Coleco (Canada) Limitée

Printed in Canada

© 1982, Coleco (Canada) Limitée Imprimé au Canada

Importé par: Coleco (Canada) Limitée
4000 St-Ambroise, Montréal (Québec), Canada, H4C 2C8



Veuillez conserver ce guide et toute documentation
pour consultation ultérieure.

Veuillez lire attentivement le guide du joueur avant d'utiliser ce
produit. Si la fonctionne pas correctement, veuillez vous référer
au guide de dépannage.

NOTE AU CLIENT!

MODULE D'EXPANSION # 2

